

## Installation Instructions for Condenser #29005

### INSTRUCTIONS

1. Turn the processor off and remove the wall plug. It is important to remove the wall plug as the main switch on the processor does not cut the power to the exhaust blower.
2. Remove the side plate of the processor. See fig 1.
3. Drill a Ø8 mm hole for the new condenser.
4. Mount the grey terminal strip over the existing one. Drill a new hole or cut a piece of the terminal strip. See fig 2.
5. Connect the condenser in series with the blower. The condenser is mounted between the brown wire coming from the fuse box and the black wire coming from the exhaust blower. See fig. 3 Or see diagram below.
6. Mount the side plate of the processor. Reconnect the processor and test it. The blower should now have reduced capacity.
7. Perform a new smoke test of the processor in order to see if there is still sufficient vacuum in the conveyor.

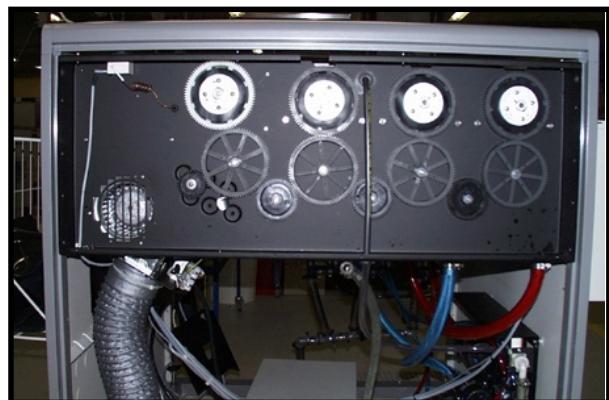
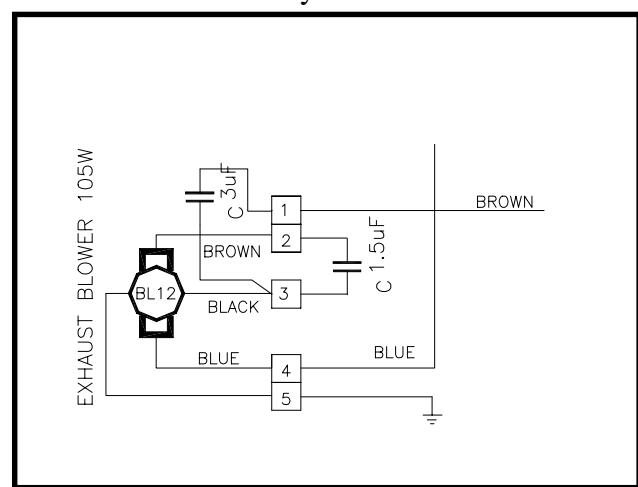


Fig. 1



Fig. 2 *mount the new terminal strip here*

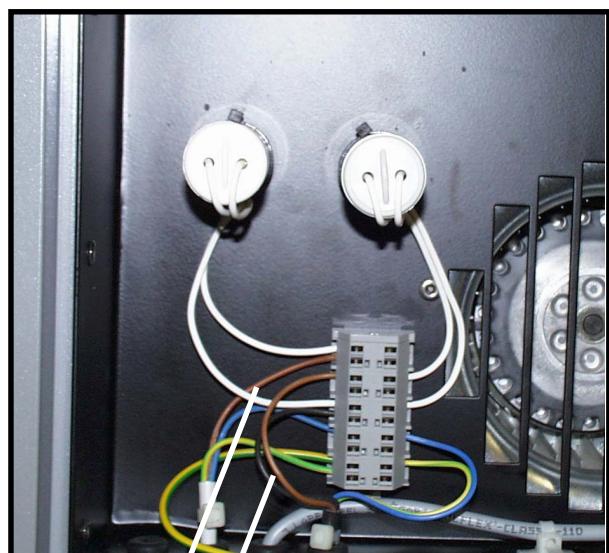


Fig. 3 *black wire*  
*brown wire*